



• PWL27FSWT6 Prize Wheel Assembly Instructions •

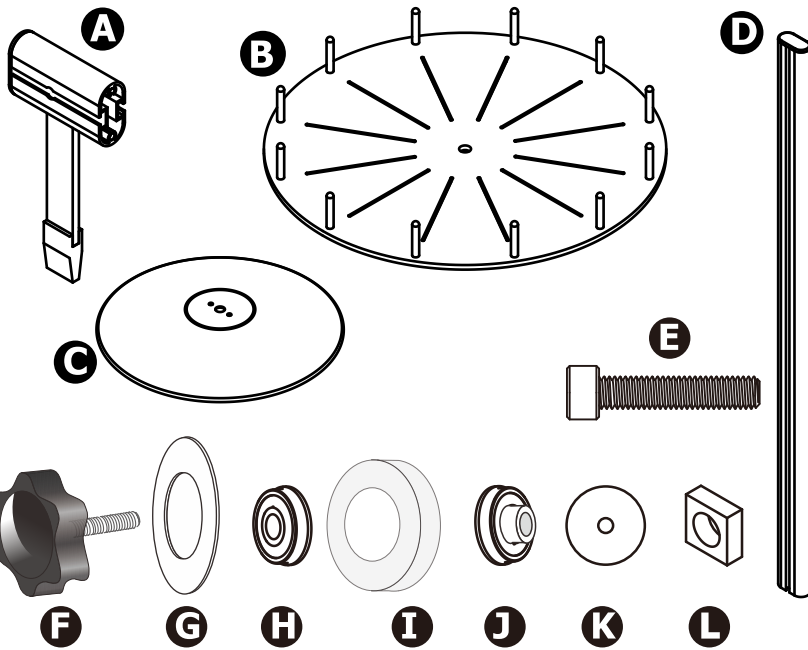

What Is In The Box

| | |
|---------------------------|---|
| A. Flapper | 1 |
| B. Wheel | 1 |
| C. Base | 1 |
| D. Post | 1 |
| E. Hex. Cap Screw | 4 |
| Instruction Sheet | 1 |
| F. Knob | 1 |
| G. Plastic Spacer | 1 |
| H. Bearing with Flange(a) | 1 |
| I. Acrylic Spacer | 1 |
| J. Bearing with Flange(b) | 1 |
| K. Washer | 1 |
| L. Square Nut | 1 |

Back of Post has enlarged holes for screw heads.

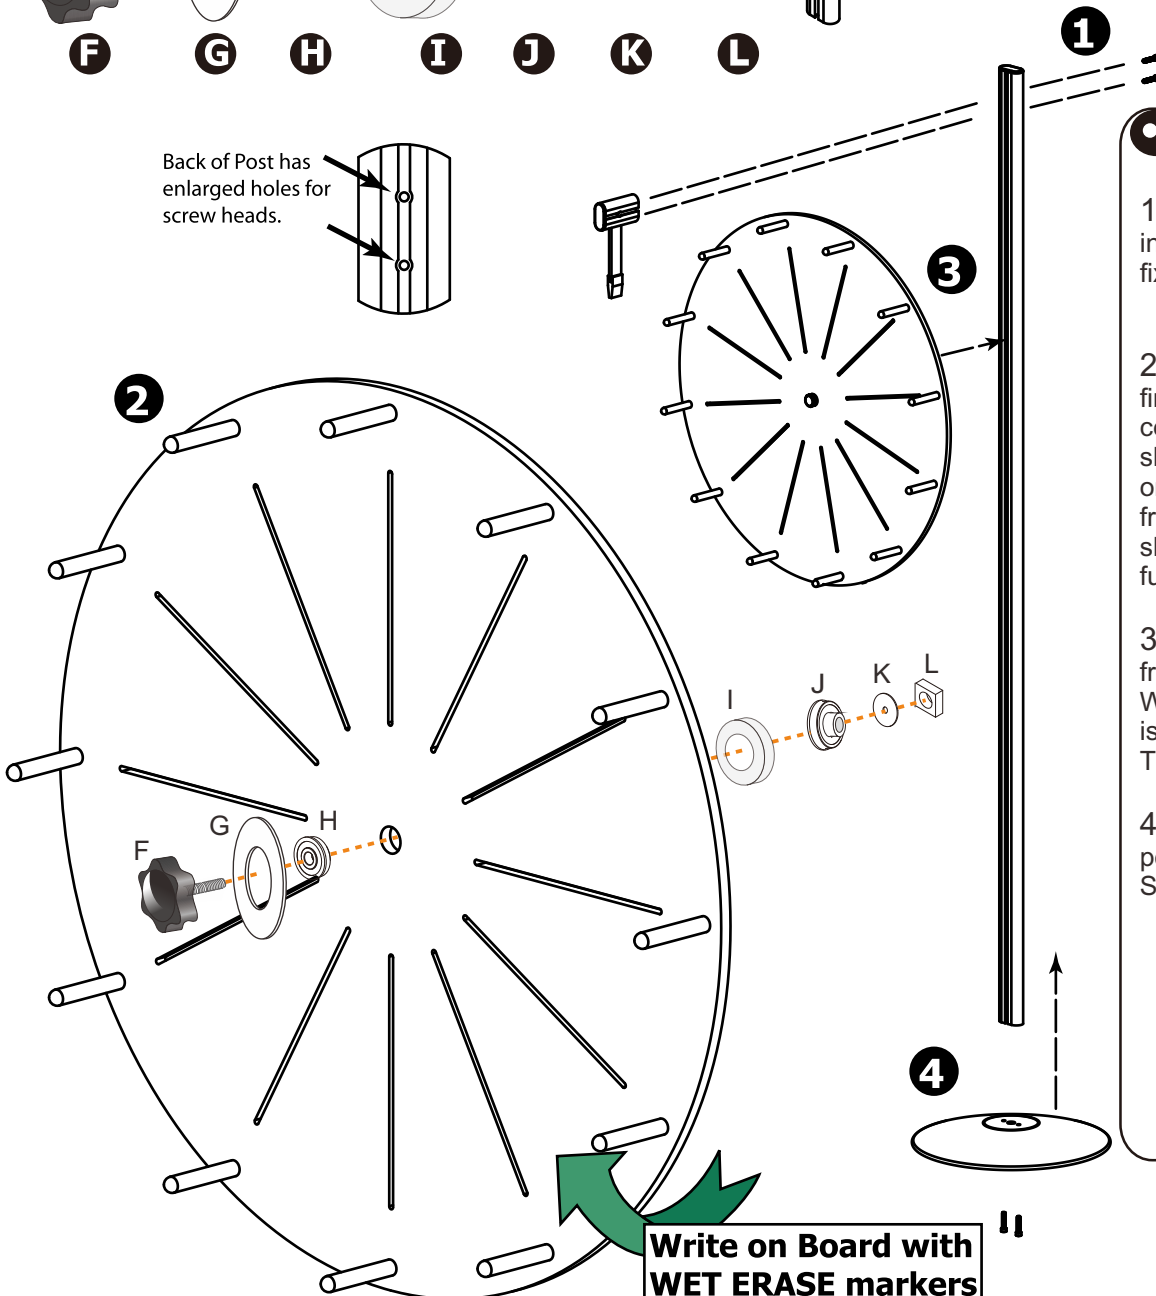

Assembly

1. Insert 2 Hex. Cap Screws (E) into back of Post (D) and fix Flapper (A) to front of post.

2. Install (G) (H) to (F) screw first and then go through the central hole in the prize wheel (B), slide (I)-(J)-(K)-(L) onto the (F) thread in sequence from the wheel's other side as shown in the diagram, do not fully tighten the part (L).

3. Place Square Nut (L) into front track of Post (D). Slide Wheel up Post until Flapper is between pins on Wheel. Tighten Knob.

4. Attach Base (C) to post (D) using 2 Hex. Cap Screw (E).