
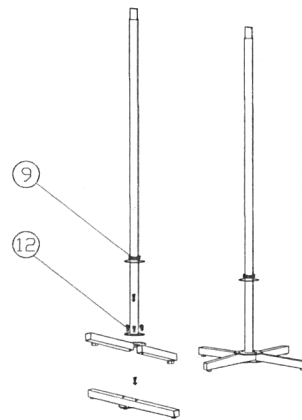



WGCW40P GREETING CARD DISPLAY SPINNER INSTRUCTIONS

PARTS LIST AND QUANTITY


1. Header (not included) - 1
2. Wire Clip - 1
3. Top Tube - 1
4. Top Shelf - 1
5. Card Holder Panels - 4
6. Bottom Tube - 1
7. Base - 2
8. Caster - 4
9. Bearing - 1
10. M6*10 Allen head screws - 1
11. Lower Shelf - 1
12. M6*35 Allen head screws - 4
13. Allen Wrench - 1

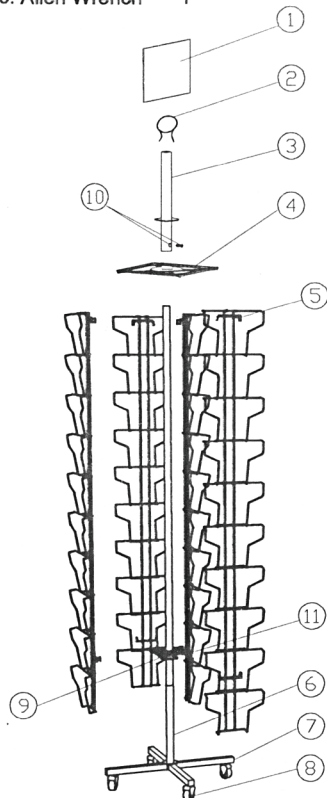

STEP 1.
Attach bottom tube to two bases with 4 pcs screws. Tighten screws, Then assembly bearing.

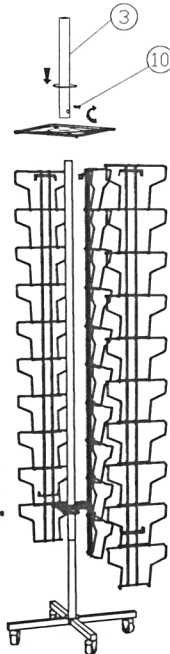

STEP 3.
Clip four panels onto lower shelf, then clip on top shelf onto four panels. Then insert top tube, tighten screw to secure top and lower tube.

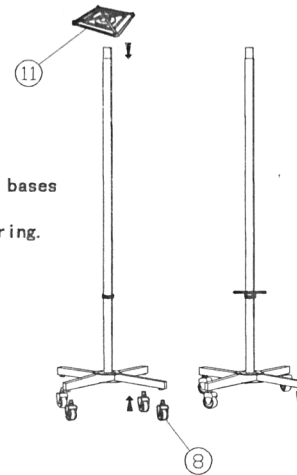

STEP 2.
Attach 4 casters to the under side of main body. Lock casters before assembling the display.



STEP 4.
Attach wire clip and header