



SAGE DISPLAY SYSTEMS

STEP 1

Remove the cover at the top of the pole and then slide the screws and the connectors along the grooves in the pole.



STEP 2

To attach clip frame or any other sage accessories.

Simply loosen both connectors (washers) attached at the back of the frame then slide the connectors along the channel.



STEP 3

Tighten screws from the front at the desired height.