
## **CB1M Cafe Barrier Instructions**

## **Product Drawing**



## Parts List

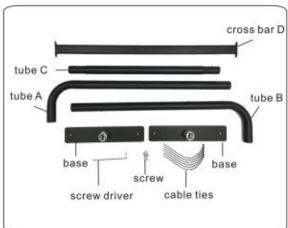


## **Assembly Instructions**



1. Insert tube A and B into each of the bases.



2. Press the locking part, insert tube C into tube A and tube B.

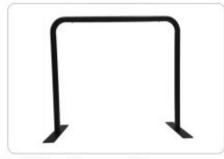


3. Finished frame as pictured.



4. Install the connected cross bar to the bottom of tube A and tube B.



5. Installed base and cross bar.

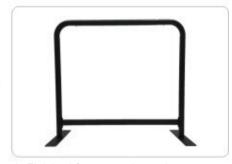

6. Finished frame as pictured.



7. Install the graphic from the top.



8. Fix the graphic with cable ties, then cut off the excess.



9. Installation complete