

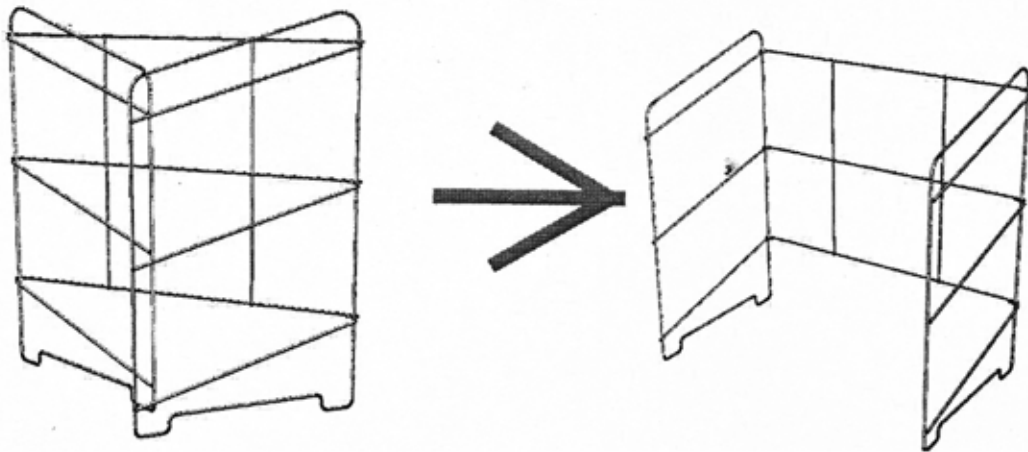


CTWR3SLF WIRE COUNTERTOP DISPLAY RACK INSTRUCTIONS


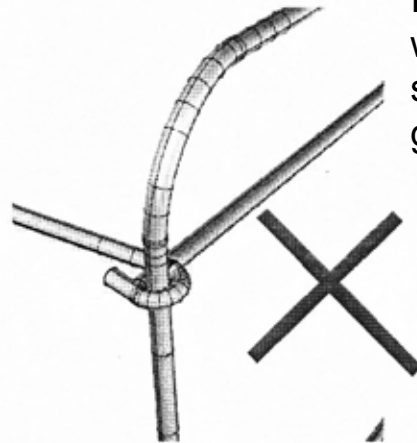


1. Unfold the metal wireframe as above images shown.

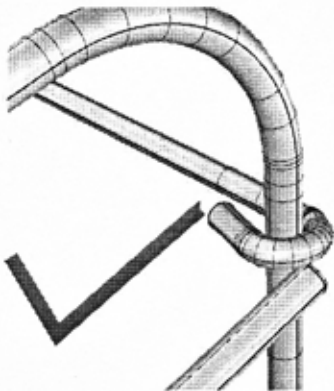

If folded to
wrong direction,
shelves won't
go in.

2. Make sure the side panels are opened correctly.

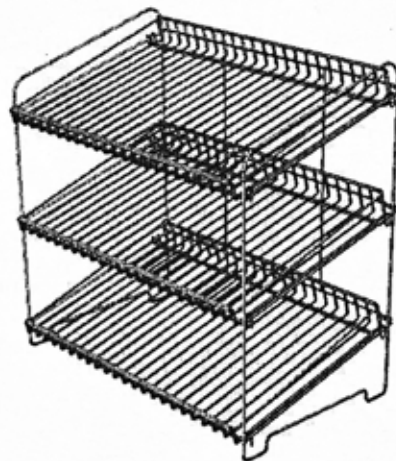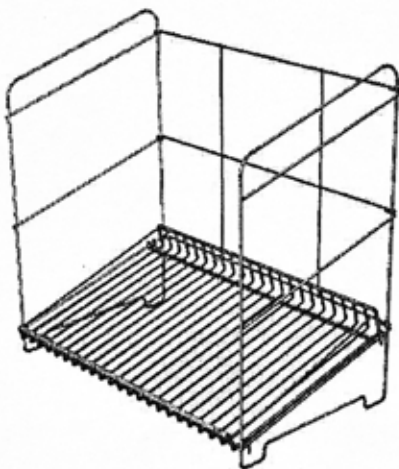

3. Insert the 3 shelves.