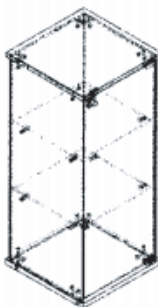
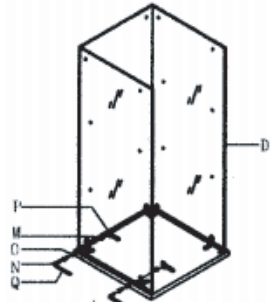
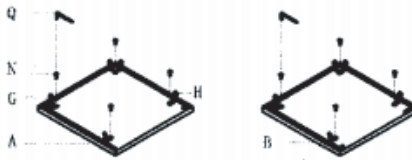
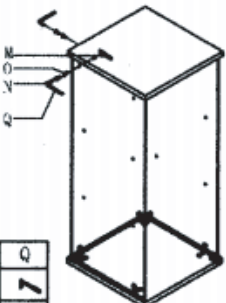
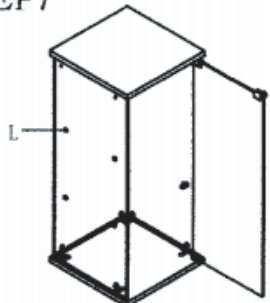
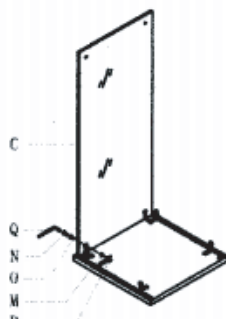
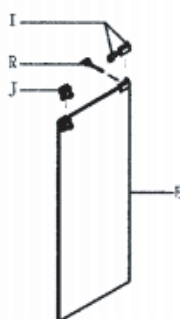
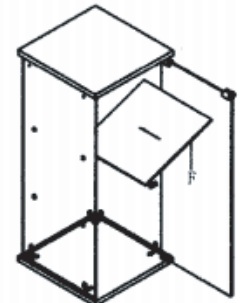


NO.	NAME	PIC.	SPEC.	UNIT	QTY	FINISH	STEP3	STEP6																														
A	Bottom panel		363X363	PCS	1		 <table border="1" data-bbox="1247 505 1516 590"><tr><td>M</td><td>N</td><td>O</td><td>P</td><td>Q</td></tr><tr><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></tr><tr><td>4</td><td>4</td><td>4</td><td>1</td><td>1</td></tr></table>	M	N	O	P	Q	•	•	•	•	•	4	4	4	1	1	 <table border="1" data-bbox="1814 505 1926 590"><tr><td>I</td><td>R</td></tr><tr><td>•</td><td>•</td></tr><tr><td>1</td><td>1</td></tr></table>	I	R	•	•	1	1									
M	N	O	P	Q																																		
•	•	•	•	•																																		
4	4	4	1	1																																		
I	R																																					
•	•																																					
1	1																																					
B	Top panel		363X363	PCS	1																																	
C	Back panel		833X343	PCS	1																																	
D	Side panel		833X337	PCS	2																																	
E	Glass door		813X328	PCS	1																																	
F	Glass shelf		328X318	PCS	2	 <table border="1" data-bbox="754 904 978 989"><tr><td>G</td><td>H</td><td>N</td><td>Q</td></tr><tr><td>•</td><td>•</td><td>•</td><td>•</td></tr><tr><td>4</td><td>4</td><td>8</td><td>1</td></tr></table>	G	H	N	Q	•	•	•	•	4	4	8	1	 <table border="1" data-bbox="1247 904 1516 989"><tr><td>M</td><td>N</td><td>O</td><td>P</td><td>Q</td></tr><tr><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></tr><tr><td>6</td><td>6</td><td>6</td><td>1</td><td>1</td></tr></table>	M	N	O	P	Q	•	•	•	•	•	6	6	6	1	1	 <table border="1" data-bbox="1814 904 1874 989"><tr><td>L</td></tr><tr><td>•</td></tr><tr><td>8</td></tr></table>	L	•	8
G	H	N	Q																																			
•	•	•	•																																			
4	4	8	1																																			
M	N	O	P	Q																																		
•	•	•	•	•																																		
6	6	6	1	1																																		
L																																						
•																																						
8																																						
G	3-hole connector			PCS	4																																	
H	2-hole connector		34X34X2.5	PCS	4																																	
I	Door hinge			PCS	1																																	
J	Lock			PCS	1																																	
K	Key			PCS	2	 <table border="1" data-bbox="754 1404 1023 1489"><tr><td>M</td><td>N</td><td>O</td><td>P</td><td>Q</td></tr><tr><td>•</td><td>•</td><td>•</td><td>•</td><td>•</td></tr><tr><td>2</td><td>2</td><td>2</td><td>1</td><td>1</td></tr></table>	M	N	O	P	Q	•	•	•	•	•	2	2	2	1	1	 <table border="1" data-bbox="1247 1404 1426 1489"><tr><td>I</td><td>J</td><td>R</td></tr><tr><td>•</td><td>•</td><td>•</td></tr><tr><td>1</td><td>1</td><td>1</td></tr></table>	I	J	R	•	•	•	1	1	1							
M	N	O	P	Q																																		
•	•	•	•	•																																		
2	2	2	1	1																																		
I	J	R																																				
•	•	•																																				
1	1	1																																				
L	Shelf support			PCS	8																																	
M	M6 nut		M6	PCS	12																																	
N	M6 screw		M6X16	PCS	20																																	
O	Rubber pad			PCS	20																																	
P	M10 wrench			PCS	1																																	
Q	M4 allen wrench			PCS	1																																	
R	Cross screw driver			PCS	1																																	

Step 1

- i. Use (Q) Allen wrench to attach (G) 3- Hole connector to (A) bottom panel and (B) Top Panel Back side of unit
- ii. Use (Q) Allen wrench to attach (H) 2- Hole connector to (A) bottom panel and (B)Top Panel Front of unit

Step 2

Use (P) M10 wrench and (Q) Allen wrench to attach (C) back glass panel to (A) Bottom panel Back of unit.

Step 3

Use (P) M10 wrench and (Q) Allen wrench to attach (D) side glass panel to (A) Bottom panel Side of unit.

Step 4

Use (P) M10 wrench and (Q) Allen wrench to attach (B) Top panel to (C) Back glass panel and (D) Side glass panels of unit.

Step 5

- i. Use (R) Cross screw driver to install (I) top door hinge onto the top right corner of (E) glass door.
- ii. Use (R) Cross screw driver to install (J) lock onto the top left corner of (E) glass door.

Step 6

- i. Put the pin of (I) bottom door hinge into the hole of (A) bottom panel of unit
- ii. Put the pin of top (I) door hinge into the hole of (B) top panel of unit. Then insert the bottom right corner of (E) glass door to (I) bottom door hinge
- iii. Use (R) Cross screw driver to fasten the screws on (I) bottom door hinge

Step 7

Install (L) shelf supports to (C) Back glass panel and (D) Side glass panels of unit

Step 8

Put (F) Glass shelves into the unit.