



# Assembly Instructions

Parts List:	ID	QTY
Right Side	A	1
Left Side	B	1
Upper Back	C	1
Top	D	1
Front/Back	E	2
Acrylic Insert	F	1
Wire Pocket	G	1
Cam, 15mm	H	12
Connector	I	12
Screwdriver	J	1
Pan Head Screw	K	1

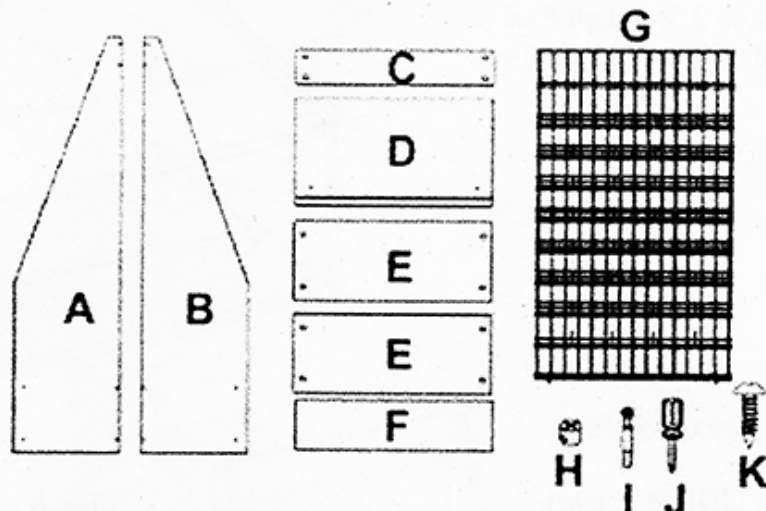

## Step 1.


Screw connectors (I) into small holes in Right (A) and Left (B) Sides.

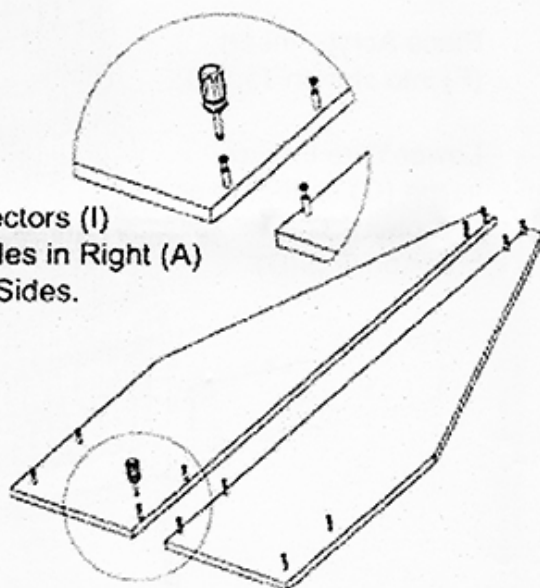

## Step 2.

Place cams (H) into large holes in Upper Back (C) and both Front/Back (E).


\* Install Upper Back (C) with small hole at bottom so retainer hook may be fixed in place.

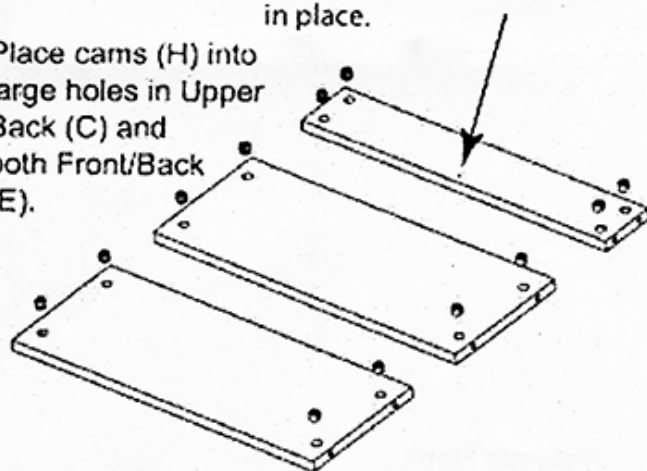

## Step 3.

Join Right Side (A) to Upper Back (C) and both Front/Back (E) as shown.


Use screwdriver to orient the arrow on the cam toward nearest edge. Insert connector and lock cams by rotating 1/2 turn clockwise.

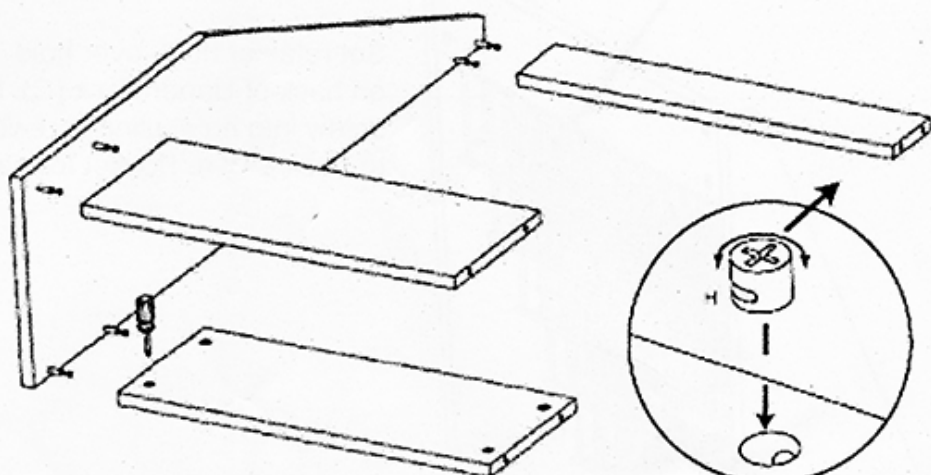

# Assembly Instructions

## Step 4.


Repeat Step 3. with Left Side (B).  
Lock cams (H) with screwdriver.

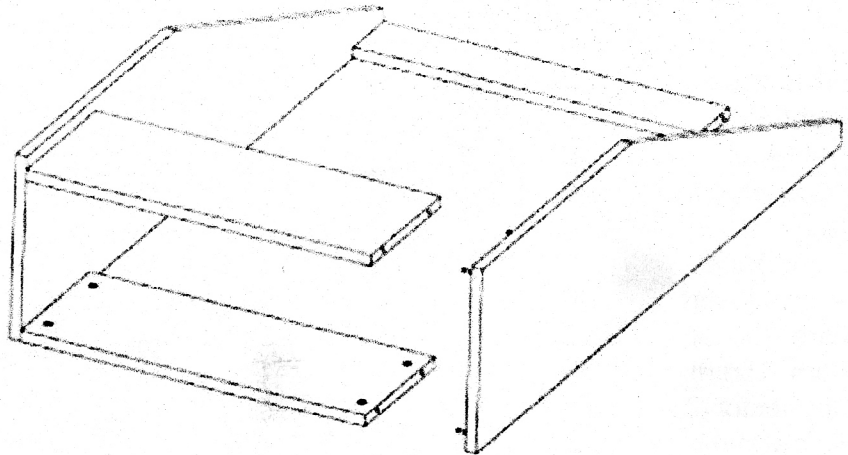

## Step 5.

Turn display up on feet.

Place Top (D) as shown.  
Slot and two holes to front  
of display.

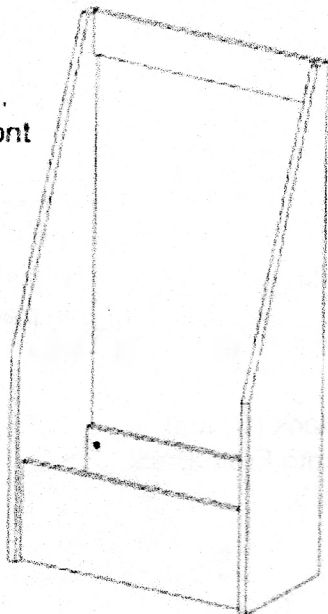


## Step 6.


Place Acrylic Insert  
(F) into slot on Top (D).

Please Note:


This step requires some  
force to ensure the panel  
does not come loose  
easily.

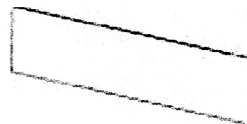

Lower Wire Pocket  
frame (G) so that  
pegs on bottom slide  
into holes on Top (D).

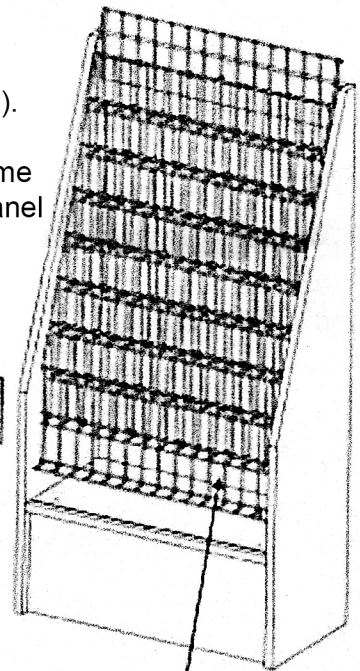

Retainer Hook

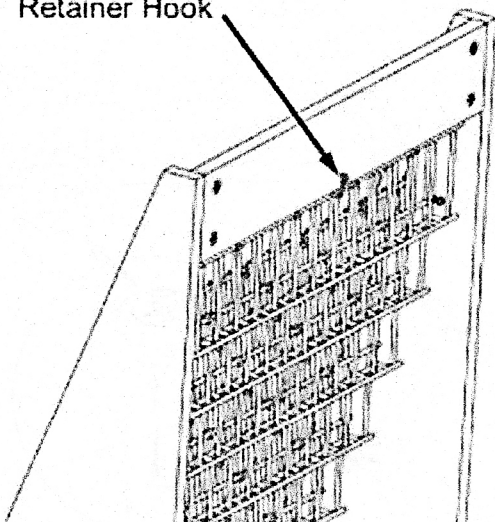

## Step 7.

Set retainer hook over hole  
on back of Upper Back (C). Insert  
screw into hole using screwdriver  
to secure Wire Pocket frame (G).

## Step 8.

Flip wire hooks on  
Wire Pocket frame (G)  
to set pocket spacing  
as desired.