


Modular Slatwall Display (SKU: MSWKIT)


Assembly Instructions

Parts List

Side bracket
2 PCS

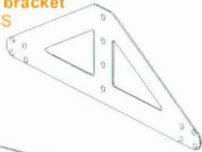

Alu. connecting tube
2 PCS




Poster frame
1 PC



Top support bar
1 PC



Alu. Upright Pole
2 PCS

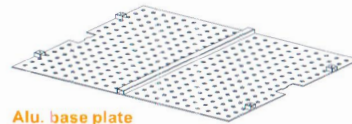

Alu. base plate
1 PC



Wheel with lock
2 PCS



Wheel
2 PCS



PVC SlatWall Panel
4 PCS



Bottom support bar
1 PC



M6x20 Hex Drive Flat head Screws
24 PCS



M4x16 Phillips Rounded Head Screw
6 PCS




M4x8 Phillips Low Profile Head Screw
4 PCS



M4x16 Phillips Flat Head Screw
8 PCS




Hex Wrench
1 PC




User manual
1 PC

Assembly Instructions

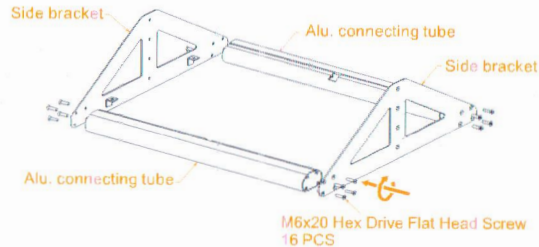


Step 1

Assemble the base by connecting 2 side brackets with 2 Aluminum Tubes using 16 M6x20 Hex Drive Flat Head screws as shown above.

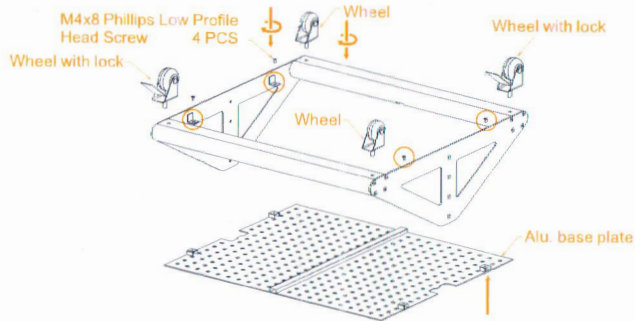

Step 2

Carefully turn the assembled base upside down and screw in 4 wheels at the 4 corners. Attach the Base Plate to the tabs on the base from the bottom and fix it using 4 Low Profile Head Screws.

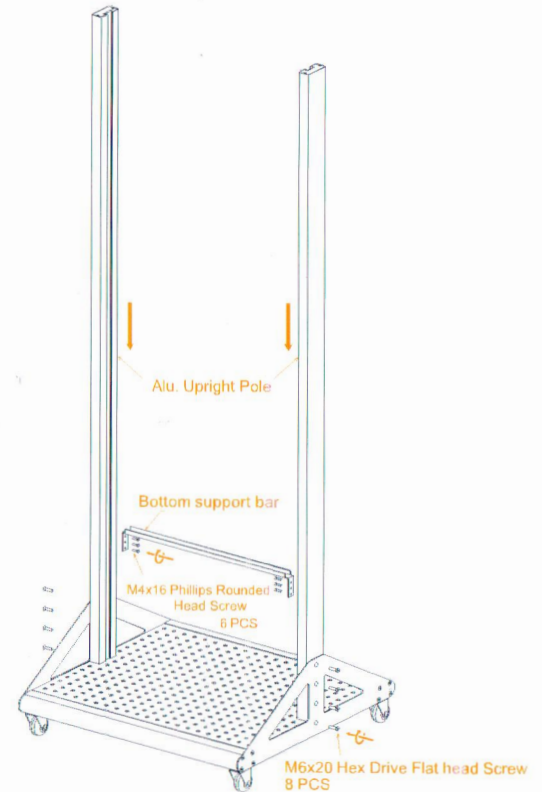

Step 3



Put the assembled base on its standing position. Insert the 2 Upright Poles into the cutouts on the base plate, and fix them using 8 M6x20 Hex Drive Flat Head screws.

Place the bottom support bar into the channels on the upright poles and fix it using M4x16 Phillips Rounded Head Screws.




Step 4

Slide 1 PVC Slatwall Panel down from the top and rest on the support bar. Assemble the remaining PVC panels the same way.

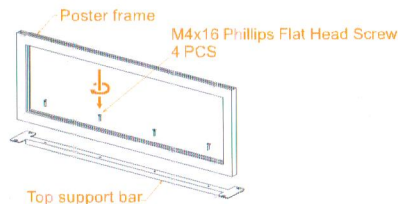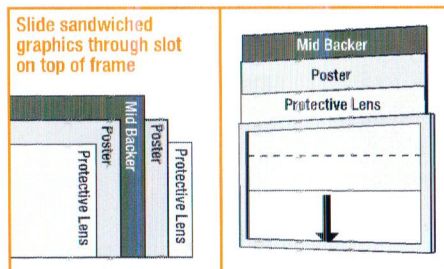

Step 5

Remove the lens and back sheet from the poster frame. Securely Fix the poster frame onto the top support bar using 4 M4x16 Phillips Flat Head Screws. Sandwich your posters and back sheet as shown above and insert back to the poster frame.

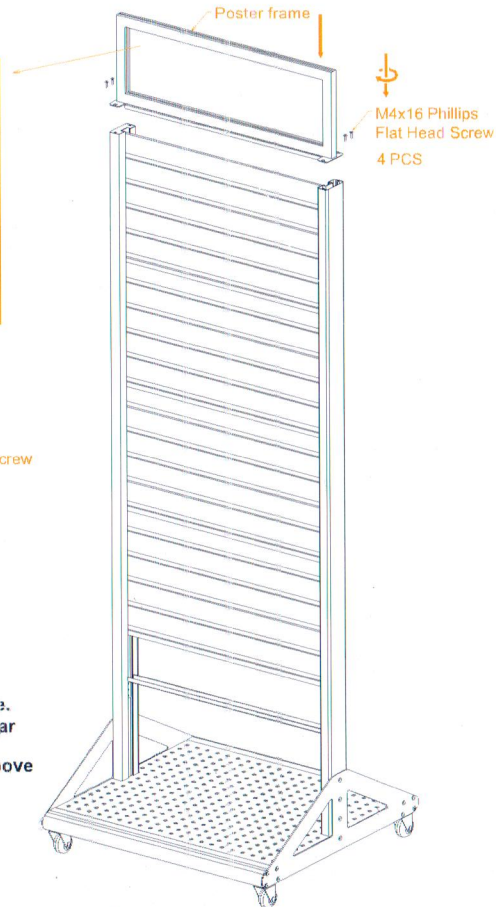

Step 6

Mount the poster set onto the straight poles using 4 M4x16 Phillips Flat Head Screws. The assembly is finished.