


# Quick & Easy Installation Guide




After measuring, screw anchors & base of standoffs into surface

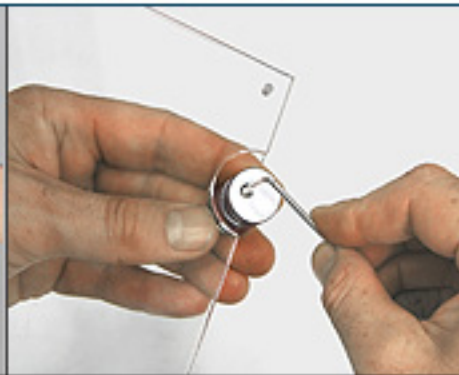

Using the included allen wrench, tighten standoffs to acrylic holder



Slide standoffs together over anchors on wall

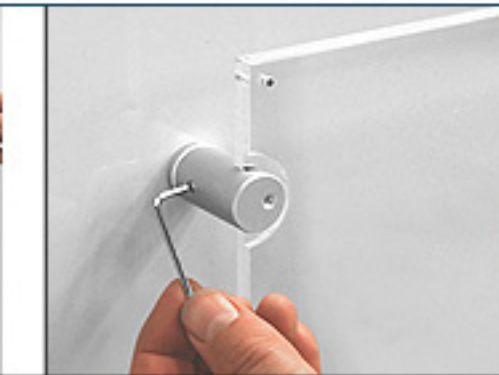

Using the included allen wrench, tighten standoffs to wall anchors