



ASSEMBLY INSTRUCTIONS

Lectern

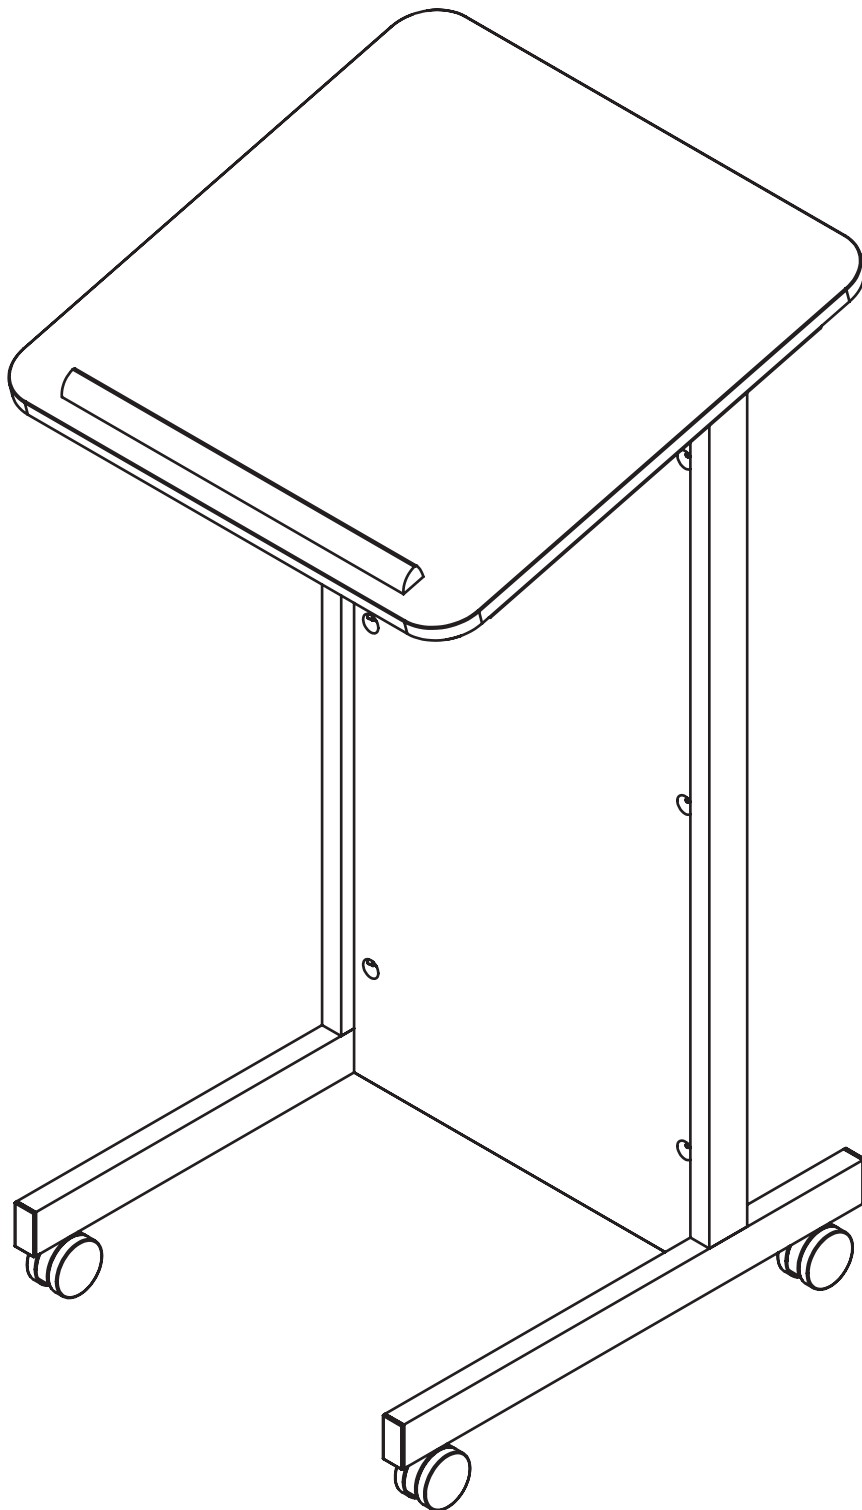

ASSEMBLY INSTRUCTIONS

Components

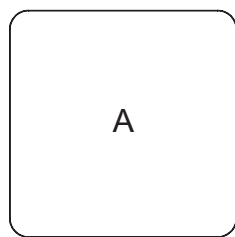


A

Top




Lip

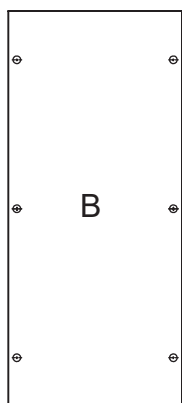


B

Back

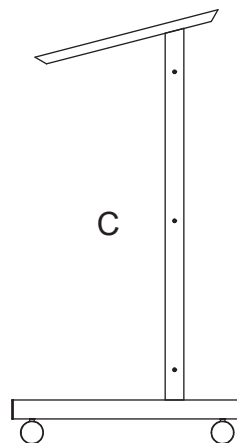

C

Left Rail

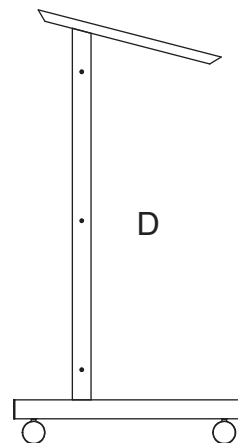

D

Right Rail

Hardware Pack



(x1) Spanner



(x1) Allen Key



(x1) Screw Driver



(x4) Cam



(x4) Washer



(x4) M6 x 35 Bolt



(x6) M6 Cam Bolt





(x3) M4 x 25 Screw




(x4) Castor

1

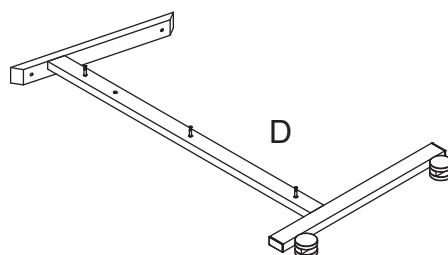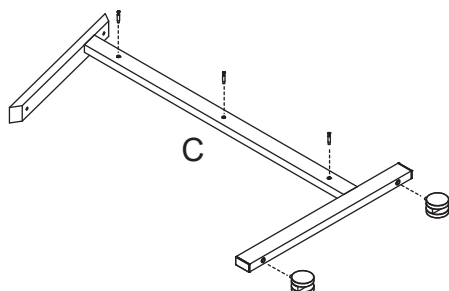


Assemble the rails. Screw in the cam bolts and castors on to the metal frame.

2

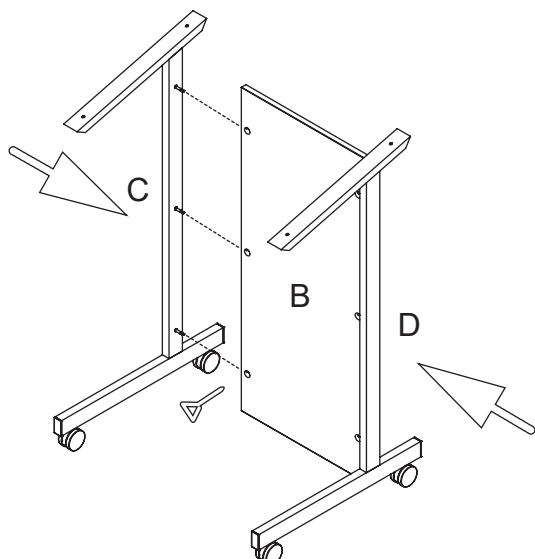

Assemble the Rails onto the Back board.
Tighten the Cam locks using the Screw driver..

3

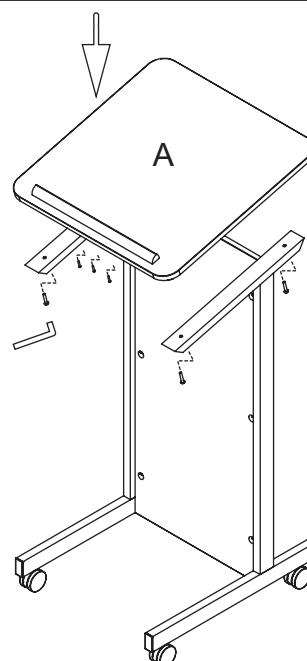

Fix the Top board to the frame using the bolts provided.
Tighten with Allen Key. Fix lip to top board by 3 M4 screws.

ASSEMBLY INSTRUCTIONS

Pilot Holes

To suit A3 and A4 Stand Offs


IMPORTANT:

Please use supplied Bolts & Nuts and NOT the screws that is included with Stand Offs.



Step 1.

Locate required size Stand Off Pilot hole -
A3 outer holes, A4 inner holes.

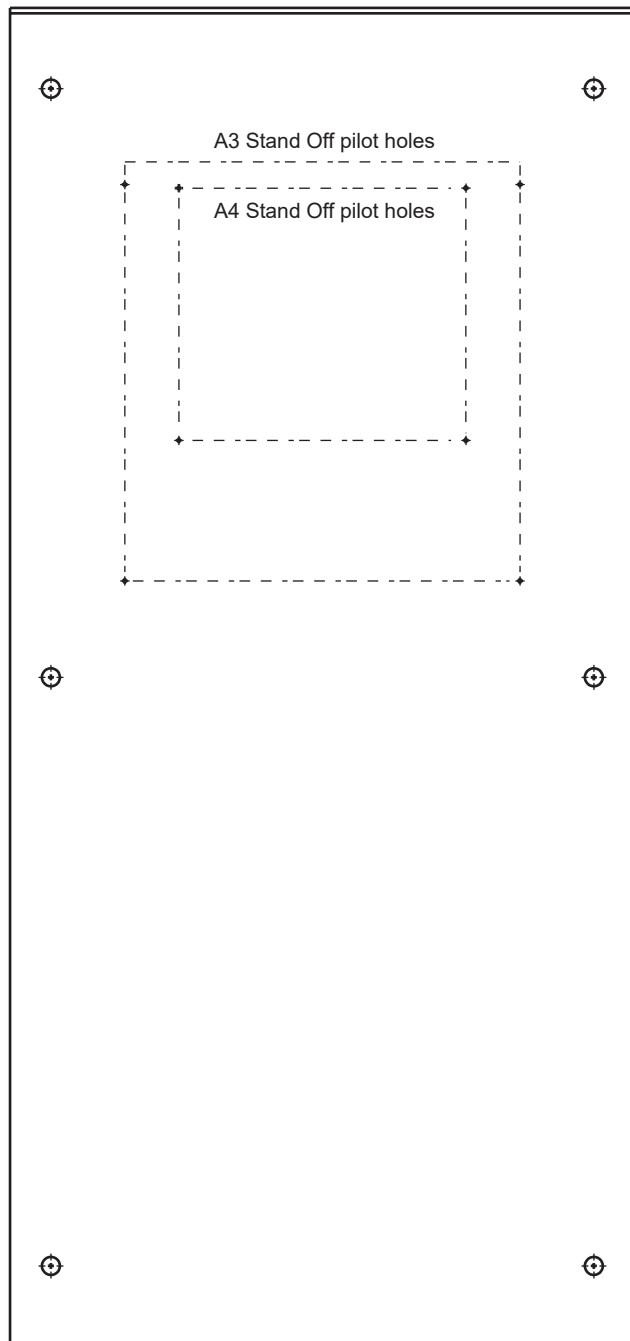

Step 4.

Attach the brochure holder to the Stand Off lugs.
Ready to use.

Step 2.

Using a 4mm drill bit, drill the 4 required holes
from back of board through to front.



Step 3.

Affix the 4 Stand Off lugs to front of board

