



# ABOA1HPRT

## INSTRUCTIONS

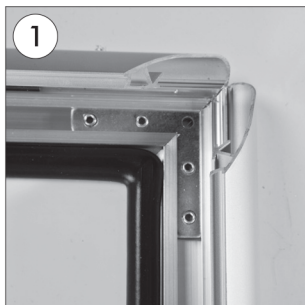

•Open all profiles.

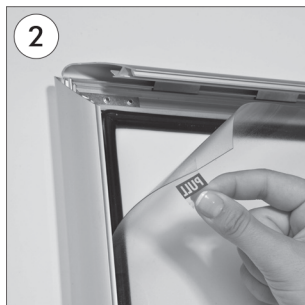

•Take-off the anti-reflex cover.




•Place in the poster.



•After placing the cover back on the poster, close the profiles.





•Place the wire header holder on the top of A Board between its hinges.

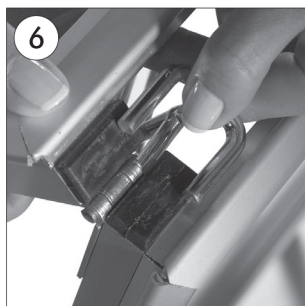

•The edges of the holder fits with the hinges.



•PVC foam header slides & fits inside the wire header holder.

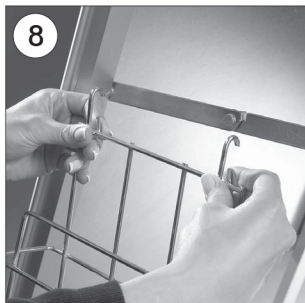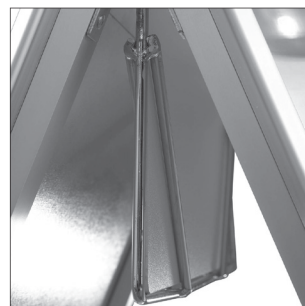

•Hang the basket on the scissors.

